

# Heaven sent

Getting to know your amazing little VM720



Copyright © Huawei Technologies Co., Ltd. 2011. All rights reserved.

## Trademarks and Permissions



**HUAWEI** and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

## No Warranty

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

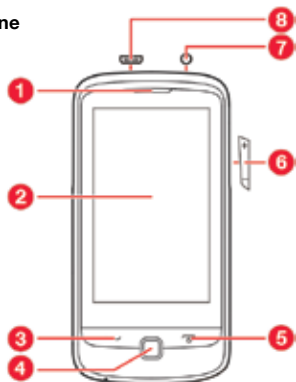 
# Contents

<b>1</b>	<b>Getting to Know Your Phone</b>	<b>1</b>
	Your Phone	1
	Keys and Functions	2
	Main Screen Icons	2
<b>2</b>	<b>Getting Started</b>	<b>4</b>
	Installing the SIM Card and the Battery	4
	Removing the Battery and the SIM Card	4
	Installing a microSD Card	4
	Charging the Battery	5
	Calibrating the Screen	6
	Accessing a Shortcut Menu	6
	Working with the Main Menu	7
	Phone Lock	8
	Mass Storage	8
	PIN and PUK	9
	Locking the Keypad	10
<b>3</b>	<b>Voice Services</b>	<b>11</b>
	Making a Call	11
	Receiving a Call	11
<b>4</b>	<b>Text Input</b>	<b>12</b>
	Changing the Text Input Mode	12
	Multi-Tap Input Mode	13
	Predictive Input Mode	13
	Entering Digits	14
	Entering Symbols	14

<b>5 Messaging</b>	<b>15</b>	<b>10 WAP Browser</b>	<b>27</b>
Writing and Sending a Text Message	15	Editing the Data Account	27
Writing and Sending a Multimedia Message	16	Connecting to a WLAN	27
<b>6 Email</b>	<b>18</b>	Selecting the WAP Parameters	28
Creating an Email Account	18	Accessing a Website	28
Activating an Email Account	18	<b>11 Bluetooth</b>	<b>29</b>
Writing and Sending an Email	18	Connecting a Bluetooth Headset to Your Phone	29
<b>7 Voicemail</b>	<b>20</b>	Transferring Data	30
<b>8 Phonebook</b>	<b>21</b>	<b>12 Media album</b>	<b>31</b>
Creating a Contact	21	<b>13 Tools</b>	<b>32</b>
Searching for a Contact	21	Alarm	32
Setting the Preferred Storage	21	Calendar	32
Copying Contacts	21	Tasks	32
Contact Group	22	Calculator	32
<b>9 Multimedia</b>	<b>23</b>	<b>14 Games &amp; apps</b>	<b>33</b>
Camera	23	Installing a Java Application	33
Video Recorder	23	Running a Java Application	34
Media Player	24	Removing a Java Application	34
Image Viewer	25	Unit Converter	34
FM Radio	25	Currency Converter	34
Sound Recorder	26	<b>15 FAQs</b>	<b>35</b>

# Getting to Know Your Phone 1

## Your Phone



1 Earpiece

2 Screen

3 Call/Answer key

4 Confirm key

5 End/Power key

6 Volume keys







7 Headset jack

8 Charger jack/Universal serial bus (USB) port






The figure above shows the appearance of your phone and is provided only for your reference.














## Keys and Functions

Press...	To...
	Make a call. Answer a call. View all call history in standby mode.
	Power the phone on or off (press and hold for about 3 seconds). End or reject a call. Return to the standby mode. Lock the keypad in standby mode.
	Access to main menu in standby mode. Confirm a selection.
	Increase the volume (by pressing  ) or decrease the volume (by pressing  ) during a call.

## Main Screen Icons

Icon	Indicates...
	Signal strength.
	Media player enabled.
	WLAN connected.

## Main Screen Icons

Icon	Indicates...
	New text messages.
	New multimedia messages.
	Call forwarding enabled.
	Missed calls.
	Alarms enabled.
	Battery level.
	<b>General</b> or <b>My style</b> profile activated.
	<b>Meeting</b> profile activated.
	<b>Outdoor</b> profile activated.
	<b>Silent</b> profile activated.
	Headset connected.
	Bluetooth activated.
	Stopwatch enabled.

## Getting Started

## 2

### Installing the SIM Card and the Battery

When installing a SIM card, ensure that the golden contact area on the SIM card is facing downward and that the beveled edge of the SIM card is properly aligned with that of the SIM card slot.



### Removing the Battery and the SIM Card

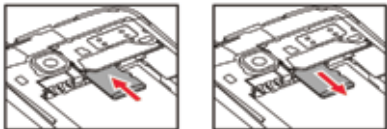
Before removing the battery and the SIM card, ensure that your phone is powered off.



### Installing a microSD Card



Before installing or removing a microSD card, power off the phone. After the phone is powered on, it will indicate whether the microSD card has been installed properly.

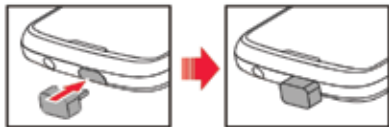


You can install a microSD card to expand the memory capacity of your phone. When inserting the microSD card, ensure that the golden contact area on the microSD card is facing downward.

## Charging the Battery

To charge the battery, do the following:


1. Connect the smaller end of the USB cable to the charger jack on the phone and the larger end to the charger.
2. Connect the charger to a power socket.




3. Wait until the battery is fully charged. During charging, an animated charging icon is displayed. When the charging icon is static, the battery is fully charged.
4. Disconnect the charger from the power socket, and then from the phone.

## Calibrating the Screen

The phone responds to the touch of your finger on the screen accurately after screen calibration.

1. In standby mode, tap  and then select **Settings > Pen calibration**.
2. Use your finger to tap the three-point marks that appear on the screen in sequence as prompted to complete screen calibration.


 
 During the calibration, tap each three-point mark accurately to ensure that the phone can respond to your tap and text entry on the screen correctly after the calibration.


## Accessing a Shortcut Menu


In standby mode, slide your finger horizontally across the screen to go to the left or right screen to select the following shortcuts:

**Add favorite contact:** tap  to add a favorite contact from phone, and then tap the selected favorite contact to add contact photo (by tapping ), **Call mobile or Send message**.

**Call history:** view **All calls** or **Missed calls** and you can also select a call record to view the phone number, make a call, send message, add new contact or replace existing.

**Audio player:** tap the icons displayed on the screen to a related settings or tap  to choose the desired music. You can also tap  to have more options.

**Shortcuts list:** tap the desired icon to access to the desired shortcut menu and tap  to add a shortcut icon from a pop-up list.

**Widgets menu:** tap  to open the widget menu, then tap and hold the icon of the widget until the color of the icon becomes light, and drag it to the desired position on the screen.


**Settings:** enable or disable **Bluetooth, My device, WIFI, Search for networks, Profiles, Auto keypad lock**, and you can also set **Wallpaper, Brightness** and **Shell settings**.


**Photo viewer:** slide your finger along with the photo to switch photos and tap the icons on the screen to arrange the related settings.

**Message (inbox):** slide your finger vertically across the message body to scroll inbox messages, and you can also tap the icons displayed on the screen to write message, reply the message, view the list of the inbox message or delete message.




## Working with the Main Menu

To work with the main menu, do the following:

1. In standby mode, tap  to access the main menu.
2. Slide your finger horizontally across the screen to go to the next or previous screen, and then tap the desired submenu to access it.
3. Slide your finger vertically across the screen to scroll through options, and then tap the desired option to access it.
4. Tap **Back** to return to the previous menu.

To return to the standby mode, press .



Your phone has two main menu screens. To switch between main menu screens, do the following:

1. In standby mode, tap  to access main menu.
2. Tap  to access to **Fancy settings Tornado**, then press  to switch **Space beam**.

## Phone Lock




The phone lock protects your phone from unauthorized use. By default, the phone lock is disabled. After the phone lock is enabled, the phone requests the phone code each time it is powered on.

To enable the phone lock, do the following:

1. Tap  and then select **Settings > Security settings > Phone lock**.
2. Tap the text box to open the onscreen keypad, enter the phone code, tap  and then **OK**.

You can change the default phone code (**1234**) to any numeric string of four to eight digits.

To change the phone code, do the following:

1. Tap  and then select **Settings > Security settings > Change password > Phone password**.
2. Tap the text box to open the onscreen keypad, enter the old phone code, tap  and then **OK**.
3. Enter the new phone code, tap  and then **OK**.
4. Enter the new phone code again to confirm it.

If you forget the phone code, contact your service provider.

## Mass Storage

When the phone is connected to a PC through a USB cable, the option **Mass storage** is displayed on the phone screen.

If you select **Mass storage**, you can manage the files stored in the phone memory and on the microSD card.

The microSD card and the phone memory are displayed as removable disks on the PC. You can perform the following operations:

Double-click a disk to open it.

Copy, paste, or delete files on the disk.

Disconnect the phone from the PC.



Ensure that you connect and disconnect the USB cable properly.



Do not run the formatting command on the PC to format the phone memory; and it may damage the phone memory permanently.

You can transfer data and charge the battery by connecting the phone to the PC through the USB cable.

## PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) unlocks the blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.


To enable the PIN lock, do the following:

1. Tap  and then select **Settings > Security settings > SIM lock**.
2. Tap the text box to open the onscreen keypad, enter the PIN, tap  and then **OK**.


If you enter incorrect PINs for a specified number of times consecutively, the phone prompts you to enter the PUK.

If you enter incorrect PUKs for a specified number of times consecutively, the SIM card becomes permanently invalid. In this case, contact your service provider for a new SIM card.


## Locking the Keypad

To lock the keypad, tap **Lock** in standby mode. To unlock the keypad, slide  from left to right.

If the auto keypad lock function is enabled and the phone is in standby mode for a preset period, the phone locks the keypad automatically.

To enable the auto keypad lock function, tap  and then select **Settings > Security settings > Auto keypad lock**, and then select the desired duration.



When the keypad is locked, you can press  to answer a call or make an emergency call.




# Voice Services


3



## Making a Call


To make a call, do the following:


1. In standby mode, tap **Dial** to open the onscreen keypad.
2. Enter the phone number.

To make an international call, tap  twice to enter the plus sign (+), and then enter the country or region code, area code, and phone number in sequence.

To call an extension, enter the phone number, tap  three times to enter **P**, or four times to enter **W**, and then enter the extension number.

3. Press  to dial the number.
4. Press  to end the call.

 You can also make calls from the call history, phonebook, and messages.

During a call, you can press  adjust the in-call volume.

## Receiving a call

When there is an incoming call, do the following:

Press  or tap **Answer** to answer the call.

Tap **Option** and select **Answer** to answer the call.


Press  or tap **Reject** to reject the call.

Tap **Silent** to mute the speaker.



# Text Input



4

## Changing the Text Input Mode


The indicator of the current text input mode is displayed on the top of the screen. You can tap  to select the text input mode.

 
Indicator	Text Input Mode
ABC, abc, Abc	Multi-tap input mode
Smart ABC, Smart abc,	Predictive input mode
Numeric	Number input mode

 Tap  to close the keyboard and tap the text box to open the keyboard.

Tap  once to delete the last entered character. You can also touch and hold  to clear all the entered characters at a time.

When the onscreen keyboard is Alphanumeric virtual

keyboard tap  to switch to QWERTY virtual keyboard, and when the onscreen keyboard is QWERTY


virtual keyboard tap  to switch to Alphanumeric virtual keyboard.

## Multi-Tap Input Mode



In multi-tap input mode, do the following to enter letters:

When the onscreen keyboard is QWERTY virtual keyboard, tap the desired letter key.


When the onscreen keyboard is Alphanumeric virtual keyboard, tap a key once to enter the first letter labeled on that key, twice to enter the second letter, and so on.

 

 When the onscreen keyboard is QWERTY virtual keyboard,

tap  to open the numeric and symbol keyboard,

tap  to start a new paragraph, or tap  to enter a space.

When the onscreen keyboard is Alphanumeric virtual

keyboard, tap  to open the numeric keyboard,

tap  to open the symbol keyboard, and tap  enter a space.

## Predictive Input Mode

In predictive input mode, when the onscreen keyboard is Alphanumeric virtual keyboard, do the following to enter a word:

1. Tap each key once according to the spelling sequence of the desired word.

The phone displays the commonly used words according to the sequence of key taps.

2. Tap  or  to scroll left or right.
3. Tap the desired word.



In predictive input mode, if the onscreen keyboard is QWERTY virtual keyboard, predictive input is not supported.

 


## Entering Digits

In number input mode, tap the desired number key.


In multi-tap input mode, when the onscreen keyboard is Alphanumeric virtual keyboard, tap the number key labeled with the desired digit consecutively until the digit appears on the screen.

## Entering Symbols

 

When the onscreen keyboard is Alphanumeric virtual keyboard, do the following to enter symbols:

1. Tap  to open the symbol keyboard.
2. Tap  or  to scroll up or down.
3. To enter symbols, do the following:

To enter only one symbol, tap the desired symbol.

To enter multiple symbols, tap  to change the icon to  and then tap the desired symbols.

When the onscreen keyboard is QWERTY virtual keyboard, do the following to enter symbols:

1. Tap  or  to open the symbol keyboard.
2. Tap the desired symbol.

# Messaging


## 5



By default, messages are stored in the phone memory.

### Writing and Sending a Text Message

To write and send a text message, do the following:

1. Tap  and then select **Messaging > Write message**.
2. Write the message.
3. Tap **Options**, and then **Send to**.
4. Tap **Enter recipient** and enter the phone number of a recipient; or tap **Add from Phonebook** and add a recipient from the phonebook.


To add multiple recipients, repeat this step.

Press or tap **Options**, and then select one of the following options:

- Send:** to send the message to the recipient.
- Edit recipient:** to edit the recipient.
- Remove recipient:** to remove the recipient.
- Remove all recipients:** to remove all recipients.
- Save:** to save the message to **Drafts** and exit the **Write message** screen.

### Writing and Sending a Multimedia Message

To write and send a multimedia message, do the following:

1. Tap  and then select **Messaging > Write message**.
2. Write the message.
3. Tap **Options** to select one of the following options:
  - Add picture:** to add a picture to the message.
  - Add sound:** to add an audio clip to the message.
  - Add video:** to add a video clip to the message.
  - Add subject:** to add a subject to the message.
  - Slide options:** to add a slide to the message, set the playing interval between two slides and so on.
  - Switch to MMS:** to change from a text message to a multimedia message.

If you select **Add picture**, **Add sound**, **Add video**, or **Add subject**, the message automatically changes from a text message to a multimedia message.

4. On the **Write message** screen, press or tap **Options**, and select **Send to**.
5. Tap **Enter recipient** and enter the phone number of a recipient; or tap **Add from Phonebook** and add a recipient from the phonebook.
 

To add multiple recipients, repeat this step.
6. Scroll to the desired recipient, press or tap **Options**, and select one of the following options:
  - Send:** to send the message to the recipient.
  - Send options:** to set the send options.

**Edit recipient:** to edit the recipient.

**Remove recipient:** to remove the recipient.

**Remove all recipients:** to remove all recipients.

**Change to Cc:** to copy the message to the recipient.

**Change to Bcc:** to blind copy the message to the recipient.

**Save to Drafts:** to save the message to **Drafts** and exit the **Write message** screen.



For the availability of the Multimedia Messaging Service (MMS) and the method for subscribing to the service, please contact your service provider.

Your phone supports a multimedia message with a maximum size of 600 KB.

Open multimedia messages with caution. Objects in multimedia messages may contain viruses (such as malicious software) that can damage your phone.


## Email

## 6

Before sending or receiving emails, you must create and activate an email account.


### Creating an Email Account

To create an email account, do the following:

1. Tap  and then select **Email**.
2. Tap the desired type from a list including **Gmail**, **Yahoo**, **Hotmail**, and **Other Email accounts**.
3. Set the relevant parameters and save the email account.


### Activating an Email Account


To activate an email account, do the following:

1. Tap  and then select **Email**.
2. Select an email account and tap **Options**, then tap **Email account**.
3. Tap the desired email account and tap **Options**, then tap **Set as default** account to activate the email account.

### Writing and Sending an Email

To write and send an email, do the following:


1. Tap  and then select **Email**.

2. Select an email account to send an email and tap **Options**, then tap **Write Email**.
3. Tap **To** to add the email address of a recipient.
4. Tap **Subject** to edit the email subject.
5. Tap  to add an attachment.
6. Set the email **Priority**.
7. Tap the text box to edit the email.
8. After editing, tap **Options** to select one of the following options:
  - Send**: to send the email.
  - Priority**: to set the email priority between High and Low.
  - Save to Drafts**: to save into Drafts and exit the editor screen.
  - Exit**: to exit the email editor screen without saving the email.

## Voice Mail

## 7

To add a voicemail number or change the existing voicemail number, do the following:

1. Tap  and then select **Messaging > Message settings > Text message > Voicemail server**.
2. Tap **Options** and then tap **Edit**.
3. Edit the voicemail name and number.
4. Tap **OK** to save the setting.

To dial the existing voicemail number, do the following:

1. Tap **Menu > Messaging > Message settings > Text message > Voicemail server**.
2. Tap the voicemail number, or tap **Options** and then tap **Call voicemail**.




You can also tap **Dial** in standby mode, and then touch and hold **1** key to dial the voicemail.

# Phonebook


## 8

### Creating a Contact

To create a contact, do the following:


1. Tap  and then select **Phonebook**.
2. Tap **Add new contact**.
3. Enter the contact information and save the contact.

### Searching for a Contact

1. Tap  and then select **Phonebook**.
2. Enter the first letter of the contact name in the text box.
3. Tap to select the desired contact.

### Setting the Preferred Storage

To select the storage where you want to save new contacts, do the following:

1. Tap  and then select **Phonebook**.
2. Tap **Options** and select **Phonebook settings > Preferred storage**.
3. Scroll to **SIM**, **Phone**, or **Both** as desired.
4. Tap **OK** to select the preferred storage.

### Copying Contacts

You can copy contacts to the phone, the SIM card, or a file.

#### Copying One Contact


To copy one contact, do the following:

1. Tap  and then select **Phonebook**.
2. Enter the first letter of the contact name in the text box.

3. Tap the desired contact.
4. Tap **Options** and select **Copy**.
5. Select **To phone**, **To SIM**, or **To file** to copy the contact to the desired location.

#### Copying Multiple Contacts


To copy multiple contacts, do the following:

1. Tap  and then select **Phonebook**.
2. Tap **Options** and select **Phonebook settings > Copy contacts**.
3. Tap the desired option, such as **SIM to phone** or **Phone to SIM**.
4. Tap the desired contacts to mark them, and then tap **Copy marked**.
5. Tap **Yes** to copy contacts to the desired location.


### Contact Group

You can create a contact group, such as family, classmates, or workmates, and then add relevant contacts to the group. The members in the group have some common features, such as **Caller ringtone** and **Caller picture**.

To create a contact group, do the following:

1. Tap  and then select **Phonebook**.
2. Tap **Options** and select **Caller groups > Add new group**.
3. Set **Group name**, **Caller picture**, **Caller ringtone**, and **Caller video**, and then tap **Options** and select **Save**.
4. Tap **Yes** to save the contact group.

To add contacts to a contact group, do the following:











1. Tap  and then select **Phonebook**.
2. Tap **Options** and select **Caller groups**.
3. Scroll to the contact group, tap **Options** and select **View members**.
4. Tap **Add** and select the desired contacts from **Phonebook**.
5. Tap the desired contacts to add them to the contact group.

# Multimedia

## 9



### Camera







The phone features a built-in 3.0-megapixel complementary metal-oxide-semiconductor (CMOS) camera.

1. Tap  and then select **Camcorder** to access Camera.
2. On the picture taking screen, do the following:
  - Tap  to view photos or configure relevant settings.
  - Tap  to adjust the exposure value.
  - Tap  to zoom in or to zoom out.
  - Tap  to select **Scene mode** and tap  to configure Self-timer.
3. Focus the camera on the scene and press  or tap  to take a picture.
4. Tap  to save the picture. You can take another picture or tap  and to delete the picture.

### Video Recorder

To record a video clip, do the following:



1. Tap  and then select **Camcorder**, and the tap  to switch to Video recorder mode.
2. In video recording mode, you can do the following:

- Tap  to configure the relevant settings.
- Tap  to start recording or  to pause.
- Tap  to adjust the exposure value.
- Tap  to zoom in or zoom out.
- Tap  to stop recording and save the video clip as instructed.






 
### Media Player

The media player plays audio clips stored in the **Audio** folder and video clips stored in the **Videos** folder in the phone memory or on the microSD card. The **Audio** folder and the **Videos** folder can be accessed from **File manager**. To obtain better sound quality, it is recommended that you use the headset to listen to audio clips.


To play a clip, do the following:


1. In standby mode, tap  and then select Media Player.
2. Select a video or audio file, and then tap  to start playing the clip.

When the clip is being played, you can do the following:



- Press  to adjust the volume, or tap  to adjust the volume.
- Tap  and  to switch between clips.
- Tap  to pause playing the clip.
- Tap  to go to the previous menu.



All audio and video files are automatically added to **Media player**. And you can also manual add a audio or video file to **Media player**, do the following:

1. In standby mode, tap  and then select **Media Player**
2. Select **All songs** and tap **Options**, and then tap **Add from folder** to add a audio file from **Phone** or **Memory card**. The method off adding video file is similar.

 Only files in .mp4 and .3gp formats are supported. Files in other formats may not play.


## Image Viewer

Tap  and then select **Camcorder**, and then tap  to access Image Viewer. Image Viewer provides the following options for all pictures in the phone memory and on the microSD card:


1. Tap  to **View**, **Browse style**, **Send** (by MMS, Bluetooth or Email), **Use as** (Wallpaper, Screen saver , Power on display, Power off display or Caller picture), **Rename**, **Delete**, **Sort by** (Name, Type, Time, Size or None), **Delete all files** and **Storage** selection.
2. Tap  to view the reeling photo list just like the phone turn left 90°.


## FM Radio


The headset cable also functions as an antenna. To ensure reception of radio programs, do not disconnect the headset from the phone or bend the headset cable.



1. Connect the headset to the phone.
2. In standby mode, tap  and then select **FM radio** to access

When listening to the radio, you can do the following:


Tap  to stop or continue the playing.

Tap  to record the program.

Press  or to adjust the volume.

Tap  or  to adjust the frequency at a precision of 0.1 MHz.

Press the button on the headset cable to switch between channels.

Tap  to view or edit the channel list, manually set a frequency, automatically search for and save channels, configure the relevant settings, record the audio clip, and so on.

## Sound Recorder


The sound recorder functions as a digital recorder.

To record an audio clip, do the following:


1. Tap  and then select **Games & apps > Sound recorder** to access **Sound recorder**.

2. Tap  to record an audio clip.

During the recording, tap  to pause or  to continue.

3. Tap  to stop recording the audio clip, and then tap **Yes** to save the recorded clip as instructed.

Tap  to view the list of the recorded files, and you can also

tap  to add a new record, view the list of the recorded files, setting the **Storage** and **File format**.



# WAP Browser

# 10


You can access Wireless Application Protocol (WAP) sites and use WAP-based services on your phone. To access WAP sites, you need to subscribe to the service from your service provider and set the relevant parameters on your phone.

For details about the service and the charges, contact your service provider.


To access WAP sites, you don't need to set your data account and WAP parameters.

## Editing the Data Account

Data account is supported by your service provider already exists, you can also edit it, do the following:

1. Tap  and then select **Connectivity > Data account**.
2. Select a existed data account
3. Tap **Options** and select **Edit**.
4. Set the parameters based on the information provided by your service provider.
5. Tap **OK** and then **Yes** to save the settings.

## Connecting to a WLAN

1. Select  and then select **Settings > Connectivity > WLAN**.
2. Turn on WLAN. If you enter WLAN at the first time, it will ask you turn on WLAN.
3. Select a WLAN. Your phone will automatically search for available WLAN after you turn on WLAN.

4. Tap **Options**. You can do the following:

**Connect:** to connect to the selected WLAN.

**Add:** to manually enter relevant parameters to add a new wireless LAN network.

**Define access point:** to view or edit the list of the wireless LAN networks to which you selected.


**WLAN status:** to view your phone's MAC address.

**Disable WLAN:** to turn off WLAN.



**Refresh:** to search for available wireless LAN networks.

## Selecting the WAP Parameters

To select the WAP data account parameters, do the following:


1. Tap  and then select **Internet > Settings > Data account > Primary account**.
2. Select an account.
3. Tap **OK** to save the settings.

---

 Select  and then select **Internet > Settings > Data account > Primary account. > WLAN** to ensure the phone has connected to an available wireless LAN network and then select the **WLAN**.

## Accessing a Website

To access a website, do the following:

1. Tap  and then select **Internet > Input address**.
2. Enter a Uniform Resource Locator (URL) address.
3. Tap **Options** and select **Go to** to access the website.

# Bluetooth

# 11


The Bluetooth function enables you to exchange data with other Bluetooth devices, and connect a Bluetooth headset to your phone.



You can turn on the Bluetooth function by configuring Bluetooth settings.


## Synchronizing Data

Before synchronizing data between a PC and your phone, ensure that the PC supports the Bluetooth function and that the operating system of the PC is Windows 2000 or Windows XP.

1. Tap  and then select **Connectivity > Bluetooth > Power**, and then tap **On** to turn on the Bluetooth function.
2. Start the Bluetooth driver on the PC.
3. Pair the PC with the phone.  
After pairing, you can synchronize data between the PC and the phone.
4. You can set **Menu > Connectivity > Bluetooth > Advanced > Sharing permission** to **Full control** or **Read only** for PC's permission.

## Connecting a Bluetooth Headset to Your Phone

To connect a Bluetooth headset to your phone, do the following:

1. Tap  and then select **Connectivity > Bluetooth > Power**, and then tap **On** to turn on the Bluetooth function.
2. Select **Search audio device** to search for available Bluetooth headsets.
3. Scroll to the desired Bluetooth headset and tap **Pair**.
4. Enter the password to pair the Bluetooth headset with your phone.


When the Bluetooth headset is connected to your phone, the headset icon is displayed on the standby screen indicating that you can use the headset.



No Bluetooth headset is included in the product package. If you need a Bluetooth headset, please purchase one separately.

## Transferring Data

To transfer data, do the following:

1. Tap  and then select **Connectivity > Bluetooth > Power**, and then tap **On** to turn on the Bluetooth function.
2. Select **My device > Search new device** to search for available Bluetooth devices.
3. Scroll to the desired Bluetooth device and tap **Pair**.  
When the Bluetooth device is connected to your phone for the first time, you need to enter the password to pair it with your phone.
4. Transfer data between your phone and the Bluetooth device.

## Media album

## 12

You can use **Media album** to organize files stored on your phone and microSD card.

To access **Media album**, tap  and then select **Media album** in standby mode.


You can enjoy music, read ebook and enjoy videos in **Media album** by access the folders in your phone.

## Tools

## 13

### Alarm


You can set five alarms on your phone.

To set an alarm, tap  and then select **Alarm** in standby mode, enable or disable the alarm, and then set the alert time, repeat mode, snooze duration, and alert type.

Once the alarm is enabled, the alarm icon is displayed on the standby screen.

### Calendar

You can add events to the calendar and keep track of important events.

To access **Calendar**, tap  and then select **Calendar** in standby mode.


### Tasks


You can add tasks to the phone. You can also view, edit, and delete tasks as desired.

To access **Tasks**, tap  and then select **Tasks** in standby mode.

Once a task is enabled, and the preset time arrives, the phone rings as a reminder.

### Calculator

To access **Calculator**, tap  and then select **Calculator** in standby mode.

To calculate, enter the number to be calculated, select a mathematical operation by tapping the corresponding key, enter another number to be calculated, and then tap  to obtain the result.

## Games & apps

## 14

To access **Games & apps**, tap  and then select **Games & apps** in standby mode.

You can install third-party Java applications to expand the capabilities of your phone.



Not all Java applications are compatible with your phone. If you have trouble in installing or running a Java application, press to return to the standby mode, and then remove the application from your phone.

Certain Java applications require network connections. Therefore, ensure that the GPRS connection is properly set up.

### Installing a Java Application


To install a Java application on your phone, do the following:

1. Select a Java installation file in .jar or .jad format from **Phone** or **Memory card**, tap **Options**, and then select **Install** to start the installation.
2. Tap **Yes** to confirm the certification information.
3. Select **Phone** or **Memory card** to install the Java application.

When the installation is completed successfully, the message **"Installed"** is displayed.


### Running a Java Application

To run a Java application, do the following:

1. Tap  and then select **Games & apps > Java**.
2. Select a Java application and tap **Options**.
3. Select **Launch** to run the Java application.

### Removing a Java Application

To remove a Java application installed on your phone, do the following:

1. Tap  and then select **Games & apps > Java**.
2. Select a Java application and tap **Options**.
3. Select **Delete** to remove the application.
4. Tap **Yes** to confirm the certification information.


After the Java application is removed, the message **"Deleted"** is displayed.

### Unit Converter

To access **Unit Converter**, tap  and then select **Games & apps > Unit converter** in standby mode.

Tap **Weight** or **Length**, select the unit, enter the value, tap and then tap **OK** to obtain the result.

### Currency Converter

To access **Currency converter**, tap  and then select **Games & apps > Currency converter** in standby mode.

Enter the rate, tap and then tap **OK**. Enter the local currency value, and then tap **OK** to obtain the result.

## FAQs

## 15

The following table lists the frequently asked questions (FAQs) and answers. You can refer to the information provided in this section before you consult the service provider or the phone dealer.

Question	Answer
How long should I charge the phone before I use it the first time?	Four hours.
Which are the factors that affect the lifetime of the battery?	<p>The lifetime of the battery depends on the number of times that the battery has been charged, the duration that the battery is charged each time, and the duration that the battery has been in service.</p> <p>The lifetime also depends on the ambient temperature, internal temperature of the battery, contact between the battery and the phone, and signal strength of the phone.</p>
When there is an incoming call, why is the caller's name not displayed?	The name and number of the caller is not stored in your phonebook or the phonebook is being initialized.

Question	Answer
What should I do when I power on my phone and the phone requires the phone code?	<p>The phone has a phone lock function that is disabled by default. If the phone lock function is enabled, the phone code is required when the phone is powered on. By default, the phone code is 1234.</p> <p>If your SIM card is locked, unlock it by entering the PUK delivered with the SIM card.</p> <p>If you have lost the PUK, go to the nearest service store of the network service provider for assistance.</p>
How do I maintain my phone and accessories?	<p>Prevent dust and water from entering your phone. Do not use your phone in a dusty or moist environment. Avoid dropping your phone and prevent physical impact to the phone.</p> <p>Do not install and remove your SIM card frequently.</p> <p>To prevent the housing or the display of your phone from scratches, avoid placing your phone near sharp objects.</p>
Why cannot my phone be powered on?	<p>The battery of your phone is almost used up.</p> <p>The power key of your phone does not function properly.</p>

Question	Answer
Why cannot I make a call from my phone?	<p>There is no signal or the signal strength is weak. Check whether your phone is within the service area and check that the signal strength is strong.</p> <p>Check whether there are barriers (such as buildings) around, which block the signal.</p>
Why does noise occur during a call?	<p>The signal strength is weak.</p> <p>You are far from the signal transmission tower, or the signal is blocked by surrounding buildings.</p>
Why cannot the battery be charged?	<p>The charger has failed.</p> <p>The battery is damaged.</p>
Why cannot my phone detect the SIM card?	<p>The SIM card may be damaged.</p> <p>Replace it with another SIM card that works properly and check again.</p>
Why cannot I tap the exactly position?	<p>Make sure you have selected Pen calibration.</p>

## Disposal and Recycling Information



This symbol on the device (and any included batteries) indicates that they should not be disposed of as normal household garbage. Do not dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of their life.

For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) directive of the European Union. The reason for separating WEEE and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present.

## Reduction of Hazardous Substances

This device is compliant with the EU Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation (Regulation No 1907/2006/EC of the European Parliament and of the Council) and the EU Restriction of Hazardous Substances (RoHS) Directive (Directive 2002/95/EC of the European Parliament and of the Council). For more information about the REACH compliance of the device, visit the website [www.huaweidevice.com/](http://www.huaweidevice.com/) certification. You are recommended to visit the website regularly for up-to-date information.

virginmedia.com

